





Micron S650DC® SAS TCG Enterprise SSC Self-Encrypting Drive Non-Proprietary FIPS 140-2 Module Security Policy

Security Level 2

Rev 0.8 - May 8, 2017

Micron Technology, LLC



Table of Contents

1	Intro	oduction	3
	1.1	Scope	3
	1.2	Security Levels	3
	1.3	References	
	1.4	Acronyms	4
2	Crvr	otographic Module Description	
	2.1	Overview	
	2.2	Logical to Physical Port Mapping	
	2.3	Product Versions	
	2.4	FIPS Approved Algorithms	
	2.5	Self-Tests	
	2.6	FIPS 140-2 Approved Mode of Operation	
	2.6.1		
	2.6.2		
	2.7	User Data Cryptographic Erase Methods	
	2.8	Revert-SP Method	
	2.9	Show Status	
3		tification and Authentication (I&A) Policy	
J	3.1	Operator Roles	
	3.1.1	<u>.</u>	
	3.1.2	**	
	3.1.2		
		Authentication	
	3.2.1		
	3.2.2	· · · · · · · · · · · · · · · · · · ·	
	3.2.3	· · · · · · · · · · · · · · · · · · ·	
4	3.2.4	ϵ	
4		ess Control Policy	
	4.1	Services	
_	4.2	Cryptographic Keys and CSPs	
5	•	sical Security	
	5.1	Mechanisms	
	5.2	Operator Requirements	
6		rational Environment	
7		urity Rules	
	7.1	Secure Initialization	
	7.2	Ongoing Policy Restrictions	
8	Miti	gation of Other Attacks Policy	17
		Table of Figures	
Fi	igure 1	Top view of tamper-evidence label on sides of drive	15
		Left-side view of tamper-evidence label on left side of drive	
		Right-side view of tamper-evidence label on right side of drive	
	_		



1 Introduction

1.1 Scope

This security policy applies to the FIPS 140-2 Cryptographic Module (CM) embedded in **Micron S650DC**[®] **SAS SSD TCG Enterprise SSC Self-Encrypting Drive** products.

This document meets the requirements of the FIPS 140-2 standard (Appendix C) and Implementation Guidance (section 14.1). It does not provide interface details needed to develop a compliant application.

This document is non-proprietary and may be reproduced in its original entirety.

1.2 Security Levels

FIPS 140-2 Requirement Area	Security Level
Cryptographic Module Specification	2
Cryptographic Module Ports and Interfaces	2
Roles, Services and Authentication	2
Finite State Model	2
Physical Security	2
Operational Environment	N/A
Cryptographic Key Management	2
Electromagnetic Interface / Electromagnetic Compatibility (EMI / EMC)	3
Self – tests	2
Design Assurance	2
Mitigation of Other Attacks	N/A

The overall security level pursued for the cryptographic modules is Security Level 2.

1.3 References

- 1. FIPS PUB 140-2
- 2. Derived Test Requirements for FIPS PUB 140-2
- 3. Implementation Guidance for FIPS PUB 140-2 and the Cryptographic Module Validation Program
- TCG Storage Security Subsystem Class: Enterprise, Specification Version 1.0, Revision 3.00, January 10, 2011
- 5. TCG Storage Architecture Core Specification, Specification Version 1.0, Revision 0.9, May 24, 2007
- 6. TCG Storage Interface Interactions Specification, Specification Version 1.0,
- 7. SCSI Primary Commands-4 Rev 15 (SPC-4)
- 8. SCSI Block Commands Rev15 (SBC-3)
- 9. Serial Attached SCSI-2 Rev 13 (SAS-2)



1.4 Acronyms

AES Advanced Encryption Standard (FIPS 197)

CBC Cipher Block Chaining, an operational mode of AES

CM Cryptographic Module

CO Crypto-officer

CSP Critical Security Parameter

CSPSK Critical Security Parameter Sanitization Key DRBG Deterministic Random Bit Generator

MEK Media Encryption Key HDD Hard Disk Drive

HMAC Hash Message Authentication Code

IV Initialization Vector for encryption operation

LBA Logical Block Address LED Light Emitting Device

MSID Manufactured SID, public drive-unique value that is used as default PIN, TCG term

NDRNG Non-Deterministic Random Number Generator

POR Power-on Reset (power cycle)

POST Power on Self-Test

PSID Physical SID, public drive-unique value

RNG Random Number Generator

SED Self-Encrypting Drive, Micron SSD products that provide HW data encryption.

SID Secure ID, PIN for Drive Owner CO role, TCG term

SoC System-on-a-Chip

SP Security Provider or Security Partition (TCG), also Security Policy (FIPS 140-2)

SSD Solid State Drives

XTS The XTS-AES algorithm is a mode of operation of the Advanced Encryption Standard (AES)



2 Cryptographic Module Description

2.1 Overview

The Micron S650DC® TCG Enterprise SSC Self-Encrypting Drive, FIPS, 140-2 Module is embodied in Micron S650DC SAS SED model solid state drive. These products meet the performance requirements of the most demanding Enterprise applications. The cryptographic module (CM) provides a wide range of cryptographic services using FIPS approved algorithms. Services include hardware-based data encryption (AES-XTS), instantaneous user data disposal with cryptographic erase, independently controlled and protected user data LBA bands and authenticated FW download. The services are provided through industry-standard TCG Enterprise SSC, SCSI protocols.

The CM, whose cryptographic boundary is the full drive enclosure, has a multiple-chip embedded physical embodiment. The physical interface to the CM is a SAS connector. The logical interfaces are the industry-standard SCSI (refer to Section1.3, items 7 & 8), TCG SWG (refer to Section1.3, item 5), and Enterprise (refer to Section1.3, item 4) protocols, carried on the SAS (refer to Section1.3, item 9) transport interface. The primary function of the module is to provide data encryption, access control and cryptographic erase of the data stored on the flash drive media. The human operator of the drive product interfaces with the CM through a "host" application on a host system.

2.2 Logical to Physical Port Mapping

FIPS 140-2 Interface	Module Ports
Data Input	SAS Connector
Data Output	SAS Connector
Control Input	SAS Connector
Status Output	SAS Connector, LED
Power Input	Power Connector

2.3 Product Versions

The following models and hardware versions (PNs) are validated with the following FW versions:

- SSD, 2.5-Inch, SAS Interface, 400 GB
 - o 400 GB: MTFDJAK400MBS-2AN16FCYY
 - o FW Versions: MB13, MB17 and MB18
- SSD, 2.5-Inch, SAS Interface, 800 GB
 - o 800 GB: MTFDJAK800MBS-2AN16FCYY
 - FW Versions: MB13, MB17 and MB18
- SSD, 2.5-Inch, SAS Interface, 1600 GB
 - o 1600 GB: MTFDJAL1T6MBS-2AN16FCYY
 - o FW Versions: MB13, MB17 and MB18
- SSD, 2.5-Inch, SAS Interface, 3200 GB
 - 3200 GB: MTFDJAL3T2MBS-2AN16FCYY
 - FW Versions: MB13, MB17 and MB18



2.4 FIPS Approved Algorithms

Algorithm	Certificate Number	Modes/Key Sizes/Etc used
Hardware AES	# 3441	256-bit XTS and CBC
Hardware RSA	#1762	FIPS 186-4 Signature verification w/ 2048-bit modulus
Hardware SHA	#2841	256-bit
Hardware HMAC	#2190	256-bit
Firmware AES	#1343	256-bit CBC
Firmware AES-GCM	#2841	256-bit
Firmware SHA	#1225	256-bit
Firmware RSA	#1021	FIPS 186-2 Signature verification w/ 2048-bit modulus
Firmware 800-90A DRBG	#62	Hash based DRBG
Firmware HMAC	#1597	256-bit
Firmware 800-38F Key Wrap	#2947	256-bit
Firmware 800-132 PBKDF	Vendor Affirmation	Option 2a
Hardware NDRNG	Non approved but allowed	

SP800-132, Section 5.4 Option 2a is used and password length is a minimum of 4 bytes. The Master Key is 256 bits and decryption algorithm is AES-GCM. The keys derived from passwords are used in storage applications.

There are algorithms, modes and keys that have been CAVS tested but not utilized by the module. Only the algorithms, modes and keys shown in this table are utilized by the module.



2.5 Self-Tests

performed. State.	Function Tested	Self-Test Type	Implementation	Failure Behavior	
Firmware AES Power-On Encrypt and Decrypt KAT performed. Firmware AES Power-On Encrypt and Decrypt KAT performed. Firmware AES Power-On Power-On Power-On State. Hardware RSA Power-On Digest KAT performed. Firmware S00-90A DRBG KAT performed. Firmware 800-90A DRBG KAT performed. Firmware 800-132 PBKDF Firmware HMAC Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Firmware Integrity Check Firmware Load Check Firmware 800-90A DRBG Firmware 800-90A DRBG Firmware Rome-On Responsible for it can be loaded. Firmware Rome-On Signature verification of new firmware is downloaded Firmware Rome-On Responsible for it can be loaded. Firmware Rome-On Rome-On Responsible for it can be loaded. Firmware Rome-On Rome-Rome-Rome-Rome-Rome-Rome-Rome-Rome-	Hardware AES	Power-On	Encrypt and Decrypt KAT	Enters FIPS Self Test Error	
performed. State.					
Firmware AES – GCM (800-38D) Hardware RSA Power-On Power-On Power-On Digest KAT performed. Enters FIPS Self Test Error State. Enter	Firmware AES	Power-On	Encrypt and Decrypt KAT	Enters FIPS Self Test Error	
GCM (800-38D) performed. State.					
Hardware RSA Power-On Digest KAT performed. Enters FIPS Self Test Error State. Hardware SHA-256 Power-On Digest KAT performed. Enters FIPS Self Test Error State. Firmware 800-90A DRBG Power-On DRBG KAT performed. Enters FIPS Self Test Error State. Firmware 800-38F Rey Wrap Power-On Encrypt and Decrypt KAT Enters FIPS Self Test Error State. Firmware 800-132 Power-On KAT performed. State. Firmware HMAC Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Hardware HMAC Power-On Signature Verification. Code constructed from SHA-256. Firmware Integrity Check Firmware Load Check Firmware Load Check Firmware is downloaded Firmware is downloaded Firmware is generated page and the previously generated random number is generated equal. Firmware Entropy DRBG 800-90B Health Tests Power-On DRBG is requested Non-Approved Conditional: Newly generated random number is compared to the previously generated random number is requested Non-Approved Conditional: Newly generated random number is Enters FIPS Self Test Error State. Firmware Enteropy DRBG 800-90B Newly generated random number is requested Conditional: Newly generated random number is equal. Firmware Entropy DRBG 800-90B Newly generated random number is requested Conditional: Newly generated random number is requested Proportion tests are performed. Non-Approved Conditional: Newly generated random number is Enters FIPS Self Test Error State. Enters FIPS Self Test Error Stat	Firmware AES –	Power-On	Encrypt and Decrypt KAT	Enters FIPS Self Test Error	
Hardware SHA-256 Power-On Digest KAT performed. Enters FIPS Self Test Error State. Firmware 800-90A DRBG Power-On DRBG KAT performed. Enters FIPS Self Test Error State. Firmware 800-38F Key Wrap Power-On Encrypt and Decrypt KAT performed. State. Firmware 800-132 Power-On KAT performed. Enters FIPS Self Test Error State. Firmware HMAC Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Hardware HMAC Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Firmware Integrity Power-On Signature Verification. Enters FIPS Self Test Error State. Firmware Load Conditional: When new firmware is downloaded Check When new firmware is downloaded Power-on Support of the previously generated random number is compared to the previously generated random number is					
Hardware SHA-256 Firmware 800-90A DRBG Firmware 800-90A DRBG Firmware 800-38F Key Wrap Firmware 800-132 Firmware 800-132 Firmware 800-132 Firmware BMAC Firmware HMAC Firmware HMAC Firmware Integrity Check Firmware Load Check Firmware Load Check Firmware 800-90A DRBG Firmware 800-90A DRBG Firmware BMO-90A DRBG Firmware Integrity Check Firmware Load Check Firmware Load Check Firmware Integrity Check Firmware BMO-90A DRBG Firmware BMO-90A DRBG Firmware BMO-90A DRBG Firmware Entropy DRBG RSA PKCS#1 signature verification of new firmware image is done before it can be loaded. Firmware BMO-90A DRBG Firmware Entropy DRBG 800-90B Health Tests RSA PKCS#1 Signature Verifocount and Adaptive Proportion tests are performed. Enters FIPS Self Test Error State. Enters FW Integrity Error State. Enters	Hardware RSA	Power-On	Verify KAT performed.	Enters FIPS Self Test Error	
Firmware 800-90A DRBG Firmware 800-38F Key Wrap Firmware 800-132 PBKDF Firmware HMAC Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Firmware Integrity Check Firmware Load Check Firmware 800-90A DRBG Firmware 800-90A DRBG Firmware Rober Power-On Code constructed from SHA-256. Firmware Integrity Check Firmware Load Check Firmware Integrity Check Firmware Bou-90A DRBG Conditional: Check Firmware Entropy DRBG 800-90B Health Tests DRBG is requested Non-Approved Conditional: Newly generated random number is requested Nowly generated random number is requested					
Firmware 800-90A DRBG Power-On DRBG KAT performed. Enters FIPS Self Test Error State. Firmware 800-38F Key Wrap Firmware 800-132 Power-On KAT performed. Enters FIPS Self Test Error State. Firmware 800-132 Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Hardware HMAC Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Firmware Integrity Check Firmware Load Check Firmware Load Check Firmware 800-90A DRBG Conditional: When new firmware is downloaded Firmware Entropy DRBG 800-90B Health Tests Non-Approved Non-Approved Power-On DRG Signature Verification Code constructed from SHA-256. Enters FIPS Self Test Error State. Enters FIPS Self Test Error	Hardware SHA-256	Power-On	Digest KAT performed.		
DRBG Firmware 800-38F Key Wrap Firmware 800-132 PBKDF Firmware HMAC Power-On Firmware HMAC Firmware HMAC Firmware HMAC Firmware HMAC Firmware HMAC Firmware HMAC Firmware Integrity Check Firmware Load Check Firmware 800-90A DRBG Firmware 800-90A DRBG Firmware Entropy DRBG Conditional: DRBG Non-Approved Conditional: Newly generated random number is requested Nowly generated random number is repute the representation of the					
Firmware 800-38F Key Wrap Firmware 800-132 PBKDF Firmware HMAC Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Hardware HMAC Firmware Integrity Check Firmware Load Check Firmware 800-90A DRBG Firmware 800-90A DRBG Firmware Entropy DRBG 800-90B Health Tests Non-Approved Firmware Entropy Check Non-Approved Conditional: Check Firmware Entropy DRBG is requested Non-Approved Conditional: Newly generated random number is Enters FIPS Self Test Error State.		Power-On	DRBG KAT performed.	Enters FIPS Self Test Error	
Power-On Firmware HMAC Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Enters FIPS Self Test Error State.					
Firmware 800-132 Power-On KAT performed. Firmware HMAC Power-On Code constructed from SHA-256. Hardware HMAC Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Hardware HMAC Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Firmware Integrity Check Firmware Load Check When new firmware is downloaded Firmware 800-90A DRBG Firmware Entropy DRBG 800-90B Health Tests Non-Approved Conditional: Newly generated random number is requested Non-Approved Conditional: Newly generated random number is requested Non-Approved Conditional: Newly generated random number is requested Nowly generated random number is requested		Power-On		Enters FIPS Self Test Error	
PBKDF Firmware HMAC Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Keyed-Hash Message Authentication Code constructed from SHA-256. Enters FIPS Self Test Error State. Enters FIPS Self Test Error State. Firmware Integrity Check Firmware Load Check Firmware Load Check Firmware is downloaded Check Firmware 800-90A DRBG Conditional: Conditional: When a random number is generated number is generated Firmware Entropy DRBG 800-90B Health Tests Non-Approved Conditional: Newly generated random number is requested Nowly generated random number is Enters FIPS Self Test Error State.	Key Wrap				
Firmware HMAC Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Hardware HMAC Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Enters FIPS Self Test Error State. Enters FIPS Self Test Error State. Enters FIPS Self Test Error State. Firmware Integrity Check Firmware Load Check Firmware Load Check Firmware is downloaded Firmware 800-90A DRBG Conditional: When a random number is generated Trimware Entropy DRBG 800-90B Health Tests Non-Approved Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Enters FIPS Self Test Error State.		Power-On	KAT performed.		
Code constructed from SHA-256. State.					
Hardware HMAC Power-On Keyed-Hash Message Authentication Code constructed from SHA-256. Firmware Integrity Check Firmware Load Check Firmware Load Check Firmware 800-90A DRBG Firmware Entropy DRBG 800-90B Health Tests Power-On Signature Verification. Signature Verification. Enters FW Integrity Error State. Enters FW Integrity Error State. Firmware verification of new firmware image is done before it can be loaded. Newly generated random number is compared to the previously generated random number. Test fails if they are equal. Repetition Count and Adaptive Proportion tests are performed. Newly generated random number is State. Enters FIPS Self Test Error State.	Firmware HMAC	Power-On		Enters FIPS Self Test Error	
Code constructed from SHA-256. Firmware Integrity Check Firmware Load Check Firmware Load Check Firmware When new firmware is downloaded Firmware 800-90A DRBG Conditional: When a random number is generated Firmware Entropy DRBG 800-90B Health Tests Code constructed from SHA-256. State. Enters FW Integrity Error State. Incoming firmware package is not loaded and is discarded. Incoming firmware package is not loaded and is discarded. State. Enters FIPS Self Test Error State.			Code constructed from SHA-256.	State.	
Code constructed from SHA-256. Firmware Integrity Check Firmware Load Check Firmware Load Check Firmware When new firmware is downloaded Firmware 800-90A DRBG Conditional: When a random number is generated Firmware Entropy DRBG 800-90B Health Tests Code constructed from SHA-256. State. Enters FW Integrity Error State. Incoming firmware package is not loaded and is discarded. Incoming firmware package is not loaded and is discarded. State. Enters FIPS Self Test Error State.					
Firmware Integrity Check Firmware Load Check Firmware Load Check Firmware Bool-90A DRBG Firmware Entropy DRBG 800-90B Health Tests Firmware Integrity Check Firmware Integrity Check Firmware Integrity Check Firmware Integrity Conditional: When new of new firmware image is done before it can be loaded. Firmware integrity Firmware integrity Conditional: When new of new firmware image is done before it can be loaded. Newly generated random number is compared to the previously generated random number. Test fails if they are equal. Firmware Entropy DRBG 800-90B Health Tests Firmware Entropy Conditional: DRBG is requested Non-Approved Firmware Integrity Firmware integrity Newly generated random number is Firmware image is done before it can be loaded. Firmware integrity Firmware image is done before it can be loaded. Firmware integrity Firmware image is done before it can be loaded. Firmware image is done befor	Hardware HMAC	Power-On			
Check Firmware Load Check When new firmware is downloaded Firmware 800-90A DRBG Firmware Entropy DRBG 800-90B Health Tests Check Conditional: RSA PKCS#1 signature verification of new firmware image is done before it can be loaded. Newly generated random number is compared to the previously generated random number. Test fails if they are equal. Repetition Count and Adaptive Proportion tests are performed. Newly generated random number is sequested Newly generated random number is Enters FIPS Self Test Error State. Newly generated random number is Enters FIPS Self Test Error			Code constructed from SHA-256.	State.	
Check Firmware Load Check When new firmware is downloaded Firmware 800-90A DRBG Firmware Entropy DRBG 800-90B Health Tests Check Conditional: RSA PKCS#1 signature verification of new firmware image is done before it can be loaded. Newly generated random number is compared to the previously generated random number. Test fails if they are equal. Repetition Count and Adaptive Proportion tests are performed. Newly generated random number is sequested Newly generated random number is Enters FIPS Self Test Error State. Newly generated random number is Enters FIPS Self Test Error	Einer Introduction	Danna On	Cinnatura Vinification	Entere EW Late suite Energy State	
Firmware Load Check When new firmware is downloaded Firmware 800-90A DRBG Firmware Entropy DRBG 800-90B Health Tests Newly generated random number is generated Tory DRBG is requested Non-Approved Conditional: Newly generated random number is compared to the previously generated random number. Test fails if they are equal. RSA PKCS#1 signature verification of new firmware image is done before it can be loaded. Newly generated random number is compared to the previously generated random number. Test fails if they are equal. Repetition Count and Adaptive Proportion tests are performed. State. Enters FIPS Self Test Error State. Enters FIPS Self Test Error State. Newly generated random number is Enters FIPS Self Test Error		Power-On	Signature Verification.	Enters FW Integrity Error State.	
Check When new firmware image is done before it can be loaded. Firmware 800-90A Conditional: When a random number is generated random number. Test fails if they are equal. Firmware Entropy DRBG 800-90B When a seed for Health Tests DRBG is requested Non-Approved Conditional: Newly generated random number is compared to the previously generated random number. Test fails if they are equal. Enters FIPS Self Test Error State. Enters FIPS Self Test Error State. Newly generated random number is Enters FIPS Self Test Error State. Newly generated random number is Enters FIPS Self Test Error State.		C 1' 1.	DCA DVCCH1	To a serious C'anno a serious al serious	
firmware is downloaded Firmware 800-90A Conditional: When a random number is generated Firmware Entropy DRBG 800-90B Health Tests Newly generated random number is compared to the previously generated random number. Test fails if they are equal. Repetition Count and Adaptive Proportion tests are performed. Proportion tests are performed. Newly generated random number is State. Enters FIPS Self Test Error State. Newly generated random number is Enters FIPS Self Test Error					
downloaded Conditional: Newly generated random number is compared to the previously generated random number. State. Enters FIPS Self Test Error State.	Check			not loaded and is discarded.	
Firmware 800-90A DRBG When a random number is when a random number is generated random number. Test fails if they are equal. Firmware Entropy DRBG 800-90B When a seed for Health Tests DRBG is requested Non-Approved Conditional: Newly generated random number is compared to the previously generated random number. Test fails if they are equal. Enters FIPS Self Test Error State. Enters FIPS Self Test Error State. Enters FIPS Self Test Error State. Newly generated random number is Enters FIPS Self Test Error State.			before it can be loaded.		
DRBG When a random number is random number. Test fails if they are generated equal. Firmware Entropy DRBG 800-90B When a seed for Health Tests DRBG is requested Non-Approved Conditional: Newly generated random number is Enters FIPS Self Test Error State. State. Enters FIPS Self Test Error State. Enters FIPS Self Test Error State. Enters FIPS Self Test Error State.	Firmware 800 00 A		Newly generated random number is	Enters FIDS Salf Tast Error	
number is generated equal. Firmware Entropy DRBG 800-90B Health Tests Non-Approved Non-Approved Prandom number. Test fails if they are equal. Repetition Count and Adaptive Proportion tests are performed. Proportion tests are performed. Newly generated random number is Enters FIPS Self Test Error State.					
generated equal. Firmware Entropy DRBG 800-90B Health Tests DRBG is requested Non-Approved generated equal. Repetition Count and Adaptive Proportion tests are performed. Proportion tests are performed. State. State. Newly generated random number is Enters FIPS Self Test Error	DRDG			State.	
Firmware Entropy DRBG 800-90B When a seed for Health Tests DRBG is requested Non-Approved Conditional: Repetition Count and Adaptive Proportion tests are performed. State. Repetition Count and Adaptive Proportion tests are performed. State. Enters FIPS Self Test Error State. Enters FIPS Self Test Error Newly generated random number is					
DRBG 800-90B When a seed for DRBG is requested Proportion tests are performed. State. Non-Approved Conditional: Newly generated random number is Enters FIPS Self Test Error	Firmware Entropy			Enters FIPS Self Test Error	
Health Tests DRBG is requested Non-Approved Conditional: Newly generated random number is Enters FIPS Self Test Error					
requested Non-Approved Conditional: Newly generated random number is Enters FIPS Self Test Error			Troportion tests are performed.	Suite.	
Non-Approved Conditional: Newly generated random number is Enters FIPS Self Test Error					
	Non-Approved		Newly generated random number is	Enters FIPS Self Test Error	
DRBG is random number. Test fails if they are					
requested equal.					



2.6 FIPS 140-2 Approved Mode of Operation

Before the operator performs Secure Initialization steps detailed in Section 7.1, the drive will operate in a non-FIPS compliant mode.

There is 1 approved mode of operation, "TCG Security".

The module's FIPS mode of operation is enforced through configuration and policy. Violating these ongoing policy restrictions (detailed in Section 7.2) would mean that one is no longer using the drive in a FIPS compliant mode of operation. The operator can determine if the CM is operating in a FIPS approved mode by invoking the Show Status service (refer to Section 4.1).

2.6.1 TCG Security Mode

This mode has the capability to have multiple Users with independent access control to read/write/crypto erase independent data areas (LBA ranges). Note that by default there is a single "Global Range" that encompasses the whole user data area which is the starting point from which multiple Users request their independent data areas.

In addition to the Drive Owner and User(s) roles, this mode implements a CO role (EraseMaster) to administer the above capability.

2.6.2 Entering FIPS Approved Mode of Operation

After the module is installed and configured per the Security Rules of this policy in Section 7.1, the drive is always in the Approved mode of operation except when a critical failure has been detected, causing a transition to a "Failed" state.

In some of these "Failed" state scenarios (e.g. repeated POST failure), the drive cannot be restored to FIPS approved mode and does not provide any FIPS services.

2.7 User Data Cryptographic Erase Methods

Since all user data is encrypted / decrypted by the CM for storage on / retrieval from the drive media, the data can be erased using cryptographic methods. The data is erased by zeroizing the Media Encryption Key (MEK).

Other FIPS services can be used to erase all the other private keys and CSPs (see Section 2.8).

2.8 Revert-SP Method

The TCG Revert-SP method may be invoked to transition the CM back to the as-manufactured state (uninitialized). This corresponds to exiting the FIPS approved mode of operation and is akin to a "restore to factory defaults" operation. This operation also provides a means to zeroize keys and CSPs. Subsequently, the CM has to be re-initialized before it can return to a FIPS compliant mode of operation. This Revert-SP method is invoked as an unauthenticated service by virtue of the use of a public credential (PSID).

2.9 Show Status

Show status service can be used to determine if the drive is operational under the security constraints of FIPS. For this purpose TCG Level 0 Discovery mechanism is utilized. TCG Level 0 Discovery mechanism maybe invoked by the operator to know if drive is in "use" or security "fail" state. If the Drive Security Life Cycle State is 0x80 then drive is in Use State i.e. security is operational. If the Drive Security Life Cycle State is 0xFF the drive is in security Fail State i.e. drive is not operational in terms of FIPS services.

The LED indicates the drive is powered on. Drive activity is indicated by blinking of the LED. No other status is indicated through LED.



3 Identification and Authentication (I&A) Policy

3.1 Operator Roles

Note: The following identifies the CO and User roles with a *general* description of the purposes. For further details of the services performed by each role in each FIPS mode, see section 4.1.

3.1.1 Crypto Officer Roles

3.1.1.1 Drive Owner

This CO role corresponds to the SID (Secure ID) Authority on the Admin SP as defined in Enterprise SSC [4]. This role is used to download a new FW image. Note: only a FIPS validated firmware version can be loaded to the module. Otherwise, the module is not operating in FIPS mode.

3.1.1.2 EraseMaster (TCG Security Mode)

This CO role corresponds to the same named role as defined in Enterprise SSC [refer to Section1.3, item 4]. This role is used to enable/disable User roles, and erase the user data region (LBA band). An operator is authenticated to this role with role-based authentication.

3.1.2 User Roles

3.1.2.1 BandMasters (0-15) (TCG Security Mode)

This user role corresponds to the same named role as defined in Enterprise SSC [refer to Section1.3, item 4]. This role is used to lock/unlock and configure a user data band ("LBA band") for read/write access.

A CM can be configured to support up to 16 user data bands, which are controlled by their respective BandMaster credentials. By default 2 user bands are enabled. BandMasters are enabled/disabled using the EraseMaster role. An operator is authenticated to the BandMaster role with identity-based authentication. If a user data band is erased (EraseMaster service) then the BandMaster PIN is reset to MSID.

3.1.3 Unauthenticated Role

This role can perform the Show Status service.

If the operator has physical access to the drive, this role can also reset the module with a power cycle (which results in POSTs). This role can also use the public PSID value to exit the FIPS approved mode of operation. See section 4.1 for details.

3.2 Authentication

3.2.1 Authentication Types

Some operator roles have role-based authentication and others have identity-based authentication. For example, the Drive Owner role uses role-based authentication as there is only one ID and one PIN. In TCG Security Mode, the CM has up to 16 User operators. Each of these operators is assigned a unique ID to which a PIN is associated, thus this provides identity-based authentication.

For some services the authentication is performed in a separate associated service; e.g. the Read Unlock service is the authentication for subsequent User Data Read service. If the User Data Read service is attempted without prior authentication then the command will fail.

3.2.2 Authentication in TCG Security Mode

Operator authentication is provided within a TCG session. The host application can have only a single session open at a time. Authentication of an operator, using the TCG interface, uses the Authenticate method to authenticate to a role after a session has been started. Authentications will persist until the session is closed.

During a session the application can invoke services for which the authenticated operator has access control. Note that a security rule of the CM is that the host must not authenticate to more than one operator (TCG authority) in a session.

For the Show Status the host application will authenticate to the "Anybody" authority which does not have a private credential. Therefore this operation is effectively an unauthenticated service.



3.2.3 Authentication Mechanism, Data and Strength

Operator authentication with PINs is implemented by hashing the operator input value and comparing it to the stored hash of the assigned PIN. The PINs have a retry attribute ("TryLimit") that controls the number of unsuccessful attempts before the authentication is blocked. The "TryLimit" has an unmodifiable value of 1024. The PINs have a maximum length of 32 bytes.

Per the policy security rules, the minimum PIN length is 4 bytes (Rule 2 in Section 7.1). This gives a probability of $1/2^{32}$ of guessing the PIN in a single random attempt. This easily meets the FIPS 140-2 authentication strength requirements of less than 1/1,000,000.

In TCG interface, each failed authentication attempt takes a minimum of 15ms to complete. Thus a theoretical maximum of $\{(60*1000)/15\}$ attempts can be processed in one minute. Thus the probability of multiple random attempts to succeed in one minute is $4000/2^{32}$. This is significantly lower than the FIPS requirement of 1/100,000. In addition, since the "TryLimit" is unmodifiable, only 1024 attempts can be processed in one minute before the authorities are locked out.

3.2.4 Personalizing Authentication Data

The initial value for SID and various other PINs is a manufactured value (MSID). This is a device-unique, 32-byte, public value. The Security Rules (Section 7) for the CM requires that the PIN values must be "personalized" to private values using the "Set PIN" service.



4 Access Control Policy

4.1 Services

The following tables represent the FIPS 140-2 services for each FIPS Approved Mode in terms of the Approved Security Functions and operator access control. Note the following:

- Use of the services described below is only compliant if the module is in the noted Approved mode.
- Underlying security functions used by higher level algorithms are not represented (e.g. hashing as part of asymmetric key)
- Operator authentication is not represented in this table.
- Some security functions listed are used solely to protect / encrypt keys and CSPs.
- Service input and output details are defined by the TCG and SCSI standards.
- Unauthenticated services (e.g. Show Status) do not provide access to private keys or CSPs.
- Some services have indirect access control provided through enable / disable or lock / unlock services used by an authenticated operator; e.g. User data read / write.



Table 1.1 - FIPS 140-2 Authenticated Services (TCG Security Mode)					
Service Name	Description	Operator Access Control	Security Function	Command(s)/Event(s)	
Set PIN	Change operator authentication data.	EraseMaster, BandMasters, Drive Owner	Firmware SHA256, Firmware DRBG, Firmware PBKDF, Firmware HMAC, Firmware AES_GCM	TCG Set Method	
Firmware Download	Enable / Disable FW Download and load complete firmware image. If the self-test of the code load passes then the device will run with the new code.	Drive Owner**	Hardware RSA, Hardware SHA	TCG Set Method, SCSI Write Buffer	
Enable / Disable BandMasters	Enable / Disable a User Authority.	EraseMaster	None	TCG Set Method	
Set Range Attributes	Set the location, size, and locking attributes of the LBA range.	BandMasters	None	TCG Set Method	
Lock / Unlock User Data Range for Read and/or Write	Block or allow read (decrypt) / write (encrypt) of user data in a range.	BandMasters	Firmware AES-GCM, Firmware AES, Firmware Key Wrap	TCG Set Method	
User Data Read / Write	Encryption / decryption of user data to/from a LBA range. Access control to this service is provided through Lock / Unlock User Data Range.	None*	Hardware AES	SCSI Read, Write Commands	
Cryptographic Erase	Erase user data in an LBA range by cryptographic means: changing the Media encryption key (MEK). BandMaster PIN is also reset.	EraseMaster,	Firmware DRBG, Hardware SHA, Firmware PBKDF, Firmware HMAC, Firmware AES_GCM,Hardware HMAC, Firmware Key Wrap	TCG Erase Method	

^{*}Security has to be Unlocked



^{**}FW Download Port has to be Unlocked

	Table 1.2 - FIPS 140-2 Unauthenticated Services (TCG Security Mode)						
Service Name	Description	Operator Access Control	Security Function	Command(s)/Event(s)			
Show Status	Reports if the CM is operational in terms of FIPS services and approved mode of operation value.	None	None	TCG Level 0 Discovery, TCG Get Method Drive Security Life Cycle State =0x80(Use State) and, Approved mode of operation value =0x02.			
Reset Module	Runs POSTs and zeroizes key & CSP in RAM.	None	All cryptographic algorithms	POR			
DRBG Generate Bytes	Returns an SP 800-90A DRBG Random Number of 256 bytes	None	Firmware DRBG, Firmware SHA256	TCG Random()			
Exit FIPS Approved Mode of Operation ¹	Transition the CM back to the asmanufactured state (uninitialized)	None (using PSID)	None	TCG AdminSP.RevertSP()			
FIPS 140 Compliance Descriptor	Reports FIPS 140 Revision, Overall Security Level, Hardware and Firmware revisions and Module name	None	None	SCSI SECURITY PROTOCOL IN – Protocol 0			

4.2 Cryptographic Keys and CSPs

The following table defines the keys / CSPs and the operators / services which use them. Note the following:

- The use of PIN CSPs for authentication is implied by the operator access control.
- The Set PIN service is represented in this table even though generally it is only used at module setup.
- All non-volatile storage of keys and CSPs is in the system area of the drive media to which there is no logical or physical access from outside of the module.
- The module uses SP 800-90A DRBG and adopts Hash DRBG mechanism.
- The module generates a minimum 256 bits of entropy for use with key generation.
- Read access of private values are internal only to the CM and are thus not represented in this table.
- There is no security-relevant audit feature.

¹ CM will enter non-compliant state, which is outside the scope of this validation



Table 3 – "Key Management"					
Name	Description	Type (Pub / Priv, key / CSP (e.g. PIN)), size	Operator Role	Services Used In	Access **(W, X)
SID (Secure ID), aka Drive Owner PIN	Auth. Data	Private, PIN, 256 bits	Drive Owner	Set PIN	W
EraseMaster	EraseMaster Auth Data	Private, PIN, 256 bits	EraseMaster	SetPIN Cryptographic Erase	W X
BandMaster 0-15 Passwords	Users Auth. Data	Private, PIN, 256 bits	BandMasters	Set PIN Lock/Unlock User Data	W
LBA Range MEKs	MEK (per LBA band)	Private, AES Key, 256 bits	Users	Lock/Unlock User Data	Х
Entropy Input String	*Input to a DRBG mechanism of a string of bits that contains entropy	Private, 256 bits	None	Services which use the DRBG (cryptographic erase)	x
Seed	*String of bits that is used as input to a DRBG mechanism	Private, Hash seed, 448 bits	None	Services which use the DRBG (cryptographic erase, SetPIN)	X
Internal State	*Collection of stored information about DRBG instantiation	Private, V and C 440 bits	None	Services which uses the DRBG (cryptographic erase, SetPIN)	х
ORG 0-0 - ORG 0-3	Firmware Load Test Signature Verify Key	Public, RSA Key, 2048 bits	Drive Owner (enable FW download)	FW Download	Х
MEKEK	This key is used to wrap the MEK	Private, AES Key, 256 bits	BandMasters, EraseMaster	Lock/Unlock User Data, Cryptographic Erase, Set PIN	W,X
Master Key	This key is used to protect the MEKEK	Private, AES Key, 32 bytes	Drive Owner, BandMasters, EraseMaster	Unlock User Data, Cryptographic Erase, Set PIN	W,X
CSPSKs	Critical Security Parameter Sanitization Keys, used within PBKDF	Private, AES Key, 256 bits	Drive Owner, BandMasters, EraseMaster	Lock/Unlock User Data, Cryptographic Erase, SetPIN	W, X

^{*} Source: Section 4 Terms and Definitions of NIST Special Publication 800-90A



^{**} W- Write access is allowed, X – Execute access is allowed

5 Physical Security

5.1 Mechanisms

The CM has the following physical security:

- Production-grade components with standard passivation
- Two tamper-evident security labels applied by Micron manufacturing prevent top and bottom cover removal for access or visibility to the media
- Exterior of the drive is opaque
- The tamper-evident labels cannot be penetrated or removed and reapplied without tamper-evidence
- The tamper-evident labels cannot be easily replicated with a low attack time
- Security label on sides of drive provide tamper-evidence of top and bottom cover removal



Figure 1: Top view of tamper-evidence label on sides of drive



Figure 2: Left-side view of tamper-evidence label on left side of drive



Figure 3: Right-side view of tamper-evidence label on right side of drive




5.2 Operator Requirements

The operator is required to inspect the CM periodically for one or more of the following tamper evidence:

- Checkerboard pattern on security label
- Security label cutouts do not match original

Upon discovery of tamper evidence, the module should be removed from service.

7mm drives

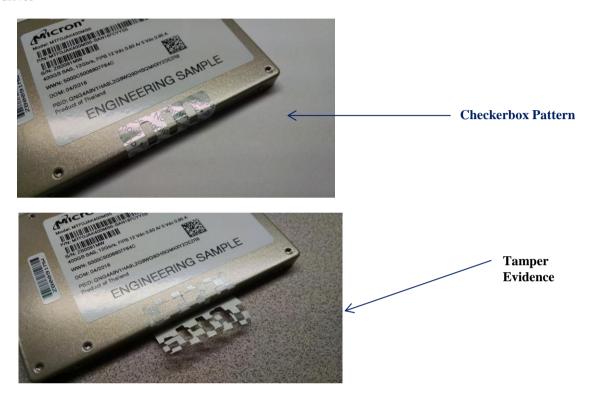

15 mm drives







6 Operational Environment

The FIPS 140-2 Area 6 Operational Environment requirements are not applicable because the CM operates in a "non-modifiable operational environment". That is, while the module is in operation the operational environment cannot be modified and no code can be added or deleted. FW can be upgraded (replaced) with a signed FW download operation. If the code download is successfully authenticated then the module will begin operating with the new code image.

7 Security Rules

7.1 Secure Initialization

The following are the security rules for initialization and operation of the CM in a FIPS 140-2 compliant manner. Reference the appropriate sections of this document for details.

- Users: At installation and periodically examine the physical security mechanisms for tamper evidence.
- COs and Users: At installation, set all operator PINs applicable for the FIPS mode to private values of at least 4 bytes length:
 - TCG Security: Drive Owner, EraseMaster and BandMasters
- 3. Drive Owner: At installation, disable the "Makers" authority¹
- 4. At installation, the value of LockOnReset¹ for FW Download must be set to "Power Cycle" and it must not be modified.
- 5. At installation, the value of PortLocked¹ for FW Download must be set to "TRUE".

7.2 Ongoing Policy Restrictions

- 1. Prior to assuming a new role, close the current Session and start a new Session, or do a power cycle, so that the previous authentication is cleared.
- 2. User Data Read/Writes shall be an authenticated service². Therefore, set ReadLockEnabled¹ and WriteLockEnabled¹ to "True" (the default value is "False"). If a band is configured with a value of "False" then the band is to be considered excluded from the module boundary.

8 Mitigation of Other Attacks Policy

The CM does not make claims to mitigate against other attacks beyond the scope of FIPS 140-2.



¹ Refer Section 1.3, Item 5

² Refer to Section 4.1, Table 1.1