



# FIPS 140-2 Security Policy for Cisco Aironet 1552E Outdoor Access Points

---

February 4, 2015  
Version 2.4

## Contents

This security policy contains these sections:

- [Overview, page 2](#)
- [Physical Security Policy, page 3](#)
- [Secure Configuration, page 4](#)
- [Roles, Services, and Authentication, page 5](#)
- [Cryptographic Key Management, page 6](#)
- [Disallowed Security Functions, page 9](#)
- [Self Tests, page 9](#)
- [Obtaining Documentation and Submitting a Service Request, page 10](#)



# Overview

The Cisco Aironet 1552E Outdoor Access Point (herein collectively called “the module”) is a wireless access point that supports the IEEE 802.11a/b/g Wi-Fi standards for wireless LAN communications. The module supports the IEEE 802.11i standard for wireless LAN security. It is a multiple-chip standalone cryptographic module, compliant with FIPS 140-2 Level 2 requirements overall and Level 3 requirements for Design Assurance.

In the FIPS mode of operations, the module supports Control and Provisioning of Wireless Access Points (CAPWAP) and Management Frame Protection (MFP). CAPWAP, together with X.509 certificates, authenticates the module as a trusted node on the wired network. CAPWAP protects all control and bridging traffic between the controller and the module with DTLS encryption. The module secures all wireless communications with Wi-Fi Protected Access 2 (WPA2). WPA2 is the approved Wi-Fi Alliance interoperable implementation of the IEEE 802.11i security standard. In the FIPS mode of operation, the module uses the following cryptographic algorithm implementations:

- AES CBC
- AES-CCM
- AES-CMAC
- AES-ECB
- SHA-1
- HMAC SHA-1
- X9.31 Random Number Generator
- RSA
- NDRNG (used to seed the Approved RNG)

This document details the security policy for the Cisco Aironet 1552E Outdoor Access Point cryptographic module. This document is non proprietary and may be freely distributed.

The evaluated platforms are summarized in [Table 1](#).

**Table 1**                      **Evaluated Platforms**

Model	Firmware Version	Hardware Version
1552E	7.0.116.0, 7.0.230.0, 7.0.240.0, 7.0.250.0, 7.0.251.2, 7.2.103.0, 7.2.115.1, or 7.2.115.2	AIR-CAP1552E-A-K9 Revision: B0 FIPS Kit Version AIRLAP-FIPSKIT=

# Physical Security Policy

This section describes the cryptographic boundary of the module and the placement of the tamper-evident labels on the module. Labels must be placed on the device(s) and maintained by the Crypto-Officer in order to operate in the FIPS approved mode of operation.

The cryptographic boundary of the Cisco Aironet 1552E Outdoor Access Point is defined by the hard metal outer casing, which surrounds all the hardware and firmware components.


The Crypto-Officer should inspect the seals for evidence of tamper as determined by their deployment policies (every 30 days is recommended). If the seals show evidence of tamper, the Crypto-Officer should assume that the modules have been compromised and contact Cisco.

## Label Placement on the 1552E

Remove any grease, dirt, or oil from the module by using alcohol-based cleaning pads, before applying the tamper-evidence labels. The chassis temperature should be above 10° C (50°F).

For the 1552E (FIPS Kit Version AIRLAP-FIPSKIT=), put two (2) tamper evident labels over the removable top and bottom cover on the left side, and two (2) tamper evident labels over the removable top and bottom cover on the right side, as shown in [Figure 1](#).

**Figure 1** Tamper Labels on 1552E

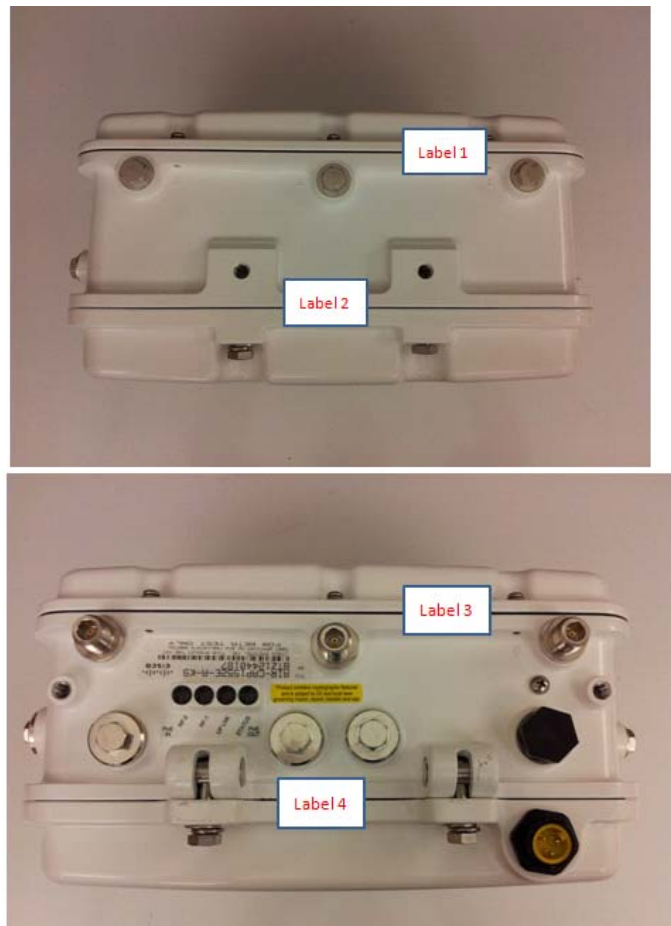

# Secure Configuration

This section details the steps used to securely configure the module to operate in FIPS 140-2 mode of operations. The administrator configures the module from the wireless LAN controller with which the access point is associated. The wireless LAN controller shall be placed in FIPS 140-2 mode of operations prior to secure configuration of the access point.

The Cisco Wireless LAN Controller Security Policy contains instructions for configuring the controller to operate in the FIPS 140-2 approved mode of operation.

## Configure CCKM (Cisco Centralized Key Management)

CCKM is Cisco's wireless key management and is an optional mode permitted by this security policy. CCKM uses the same cipher suite as 802.11i; however, it has a slightly different key management scheme to support wireless client fast roaming between access points. Wireless client must comply with the updated CCKM specification described in CCXv5 in the FIPS mode of operation.

The following controller CLI command configures CCKM on a given WLAN:

```
> config wlan security wpa akm cckm enable index
```

Refer to the *Cisco Wireless LAN Controller Configuration Guide* for additional instructions.

**Note**

The module does not participate in the CCKM key establishment but rather assists in passing data between the client and the RADIUS server.

## Connect AP to a Controller

Establish an Ethernet connection between the AP Cryptographic Module and a LAN controller configured for the FIPS 140-2 approved mode of operations.

## Set Primary Controller

Enter the following controller CLI command from a wireless LAN controller with which the access point is associated to configure the access point to communicate with trusted wireless LAN controllers operating in FIPS mode:

```
> config ap primary-base controller-name access-point
```

Enter this command once for each trusted controller. Enter **show ap summary** to find the access point name. Enter **show sysinfo** to find the name of a controller.

## Save and Reboot

After executing the above commands, you must save the configuration and reboot the wireless LAN controller:

```
> save config
> reset system
```

# Roles, Services, and Authentication

This section describes the roles, services, and authentication types in the security policy.

## Roles

The module supports the roles of Crypto Officer and User. The CO role is fulfilled by the wireless LAN controllers on the network that the module communicates with, and performs routine management and configuration services, including loading session keys and zeroization of the module. The User role is fulfilled by wireless clients. The module does not support a maintenance role.

## Services

The services provided are summarized in [Table 2](#).

**Table 2**      **Module Services**

Service	Role	Purpose
Self Test and Initialization	CO	Cryptographic algorithm tests, firmware integrity tests, module initialization.  <b>Note</b> Module initialization can be obtained either by the CO resetting the access point remotely or by someone with physical access to the module manually cycling the power.
System Status	CO	Show the network activity and overall operational status.
Key Management	CO	Key and parameter entry, key output, key zeroization.
Module Configuration	CO	Selection of non-cryptographic configuration settings.
CAPWAP	CO	Establishment and subsequent data transfer of a CAPWAP session for use between the module and the CO.
802.11i	User, CO	Establishment and subsequent data transfer of an 802.11i session for use between the wireless client and the AP.
CCKM	User, CO	Establishment and subsequent data transfer of a CCKM session for use between the wireless client and the AP
MFP	User, CO	<ul style="list-style-type: none"> <li>Validating one AP with a neighboring AP's management frames using infrastructure MFP</li> <li>Encrypt and sign management frames between AP and wireless client using client MFP</li> </ul>

An unauthenticated operator may observe the System Status by viewing the LEDs on the module which show network activity and overall operational status. A solid green LED indicates normal operation and the successful completion of self-tests. The module does not support a bypass capability in the approved mode of operations.

## Crypto Officer Authentication

The Crypto Officer (Wireless LAN Controller) authenticates to the module through the CAPWAP protocol, using an RSA key pair with 1536 bit modulus. NIST SP 800-57 defines this modulus size as having effective symmetric key strength of 96 bits. An attacker would have a 1 in  $2^{96}$  chance of randomly obtaining the key, which is much stronger than the one in a million chance required by FIPS 140-2. To exceed a one in 100,000 probability of a successful random key guess in one minute, an attacker would have to be capable of approximately  $7.9 \times 10^{23}$  attempts per minute, which far exceeds the operational capabilities of the modules to support.

## User Authentication

Users are authenticated to the module by means of the Temporal Key (TK). The TK portion of the 802.11i Pairwise Transient Key (PTK) is 128 bits. An attacker would have a 1 in  $2^{128}$  chance of randomly obtaining the key, which is much stronger than the one in a million chance required by FIPS 140-2. To exceed a one in 100,000 probability of a successful random key guess in one minute, an attacker would have to be capable of approximately  $3.4 \times 10^{33}$  attempts per minute, which far exceeds the operational capability of the module to support.

## Cryptographic Key Management

Cryptographic keys are stored in flash and in SDRAM for active keys.

The DTLS Pre-Master Secret is generated in the AP using the approved DRNG. The DTLS Pre-Master Secret is used to derive the DTLS Encryption and Integrity Keys. All other keys are input into the module from the controller encrypted over a CAPWAP session. During a CAPWAP session, the APs first authenticate to the Wireless LAN controller using an RSA key pair. All traffic between the AP and the controller is encrypted in the DTLS tunnel. Keys such as the 802.11i, CCKM and MFP keys are input into the module encrypted with the DTLS session key over the CAPWAP session. The module does not output any plaintext secret or private cryptographic keys.

[Table 3](#) lists the secret and private cryptographic keys and CSPs used by the module. [Table 4](#) lists the public keys used by the module. [Table 5](#) lists the access to the keys by service.

**Table 3** Secret and Private Cryptographic Keys and CSPs

Name	CSP Type	Storage	Description and Zeroization
PRNG seed key	X9.31	Flash	This is the seed key for the PRNG. It is statically stored in the code and is zeroized when the controller image is erased during zeroization procedure.
PRNG seed	X9.31	SDRAM	This is the seed for the PRNG. It is generated using the reg_add_fresh_entropy function. It is zeroized during the zeroization procedure.

**Table 3** *Secret and Private Cryptographic Keys and CSPs (continued)*

<b>Name</b>	<b>CSP Type</b>	<b>Storage</b>	<b>Description and Zeroization</b>
ciscoIdCert	RSA	Flash	This is the AP's RSA private key. It is zeroized during the zeroization procedure.
DTLS Pre-Master Secret	Shared secret	SDRAM	Shared secret generated by approved RNG for generating the DTLS encryption key.
DTLS Master Secret	Shared secret	SDRAM	Derived from DTLS Pre-Master Secret. Used to create the DTLS Encryption and Integrity Keys.
DTLS Encryption Key (CAPWAP Session Key)	AES-CBC	SDRAM	Session key used to encrypt and decrypt CAPWAP control messages.
DTLS Integrity Key	HMAC- SHA-1	SDRAM	Session key used for integrity checks on CAPWAP control messages.
Infrastructure MFP MIC Key	AES-CMAC	SDRAM	The 128 bit AES Key which is used to sign management frames when infrastructure MFP is enabled. It is zeroized during the zeroization procedure.
802.11i Pairwise Transient Key (PTK)	AES-CCM	SDRAM	The PTK, also known as the CCMP key, is the 802.11i session key for unicast communications.  This key also used to encrypt and sign management frames between AP and the wireless client. It is zeroized during the zeroization procedure.
802.11i Temporal Key (TK)	AES-CCM	SDRAM	The TK, also known as the CCMP key, is the 802.11i session key for unicast communications. It is zeroized during the zeroization procedure.
802.11i Group Temporal Key (GTK)	AES-CCM	SDRAM	The GTK is the 802.11i session key for broadcast communications. It is zeroized during the zeroization procedure.
Key Confirmation Key (KCK)	HMAC- SHA-1	SDRAM	HMAC-SHA-1 Key component of PTK.
Key Encryption Key (KEK)	AES-KeyWrap	SDRAM	AES Key Encryption Key component of PTK.
CCKM Pairwise Transient Key (PTK)	AES-CCM	SDRAM	The CCKM PTK is the CCKM session key for unicast communications. It is zeroized during the zeroization procedure.
CCKM Group Temporal Key (GTK)	AES-CCM	SDRAM	The CCKM GTK is the CCKM session key for broadcast communications. It is zeroized during the zeroization procedure.

**Table 4**      **Public Keys**

<b>Name</b>	<b>Algorithm</b>	<b>Storage</b>	<b>Description and Zeroization</b>
bsnOldDefaultCaCert	RSA	Flash	Verification certificate, used with CAPWAP to authenticate the controller. It is zeroized during the zeroization procedure.
bsnDefaultRootCaCert	RSA	Flash	Verification certificate, not used in FIPS mode of operations. It is zeroized during the zeroization procedure.
bsnDefaultCaCert	RSA	Flash	Verification certificate, not used in FIPS mode of operations. It is zeroized during the zeroization procedure.
cscsDefaultNewRootCaCert	RSA	Flash	Verification certificate, not used in FIPS mode of operations. It is zeroized during the zeroization procedure.
cscsDefaultMfgCaCert	RSA	Flash	Verification certificate, not used in FIPS mode of operations. It is zeroized during the zeroization procedure.
cscsIdCert	RSA	Flash	This is the AP's RSA public key.

**Table 5**      **Key/CSP Access by Service**

<b>Service</b>	<b>Key Access</b>
Self Test and Initialization	<ul style="list-style-type: none"> <li>Initializes PRNG Seed</li> </ul>
System Status	<ul style="list-style-type: none"> <li>None</li> </ul>
Key Management	<ul style="list-style-type: none"> <li>Read/Write Infrastructure MFP MIC Key, PTK, TK, GTK, KCK, KEK, CCKM PTK, CCKM GTK</li> <li>Destroy all keys (with Key Zeroization command)</li> </ul>
Module Configuration	<ul style="list-style-type: none"> <li>None</li> </ul>
DTLS	<ul style="list-style-type: none"> <li>Uses cscsIdCert and bsnOldDefaultCaCert to authenticate Wireless controller</li> <li>Generates DTLS Pre-Master Secret</li> <li>Derives DTLS Master Secret</li> <li>Derives the DTLS encryption and DTLS integrity keys to secure CAPWAP transactions between AP and Wireless controller</li> </ul>



**Table 5 Key/CSP Access by Service (continued)**

Service	Key Access
CAPWAP	<ul style="list-style-type: none"> <li>• Convey CSPs using DTLS, including:                             <ul style="list-style-type: none"> <li>– Decrypt GTK and TK entry from the controller for 802.11i service</li> <li>– Decrypt CCKM PTK and GTK from the controller for CCKM service</li> <li>– Decrypt MFP MIC key entry from the controller for use in MFP service</li> </ul> </li> </ul>
802.11i	<ul style="list-style-type: none"> <li>• Encrypt/decrypt using TK, GTK</li> </ul>
CCKM	<ul style="list-style-type: none"> <li>• Encrypt/decrypt using CCKM PTK and GTK</li> </ul>
MFP	<ul style="list-style-type: none"> <li>• Sign AP management frames using Infrastructure MIC key</li> <li>• Encrypt and sign AP management frames using 802.11i PTK</li> </ul>

## Key Establishment

The module uses RSA key wrapping which provides 96 bits of effective key strength to establish 128 bit AES keys for DTLS. Keys are also entered into the module encrypted with the DTLS Encryption Key.

## Key Zeroization

All keys in the module may be zeroized by entering this command on the controller to which the access point is associated:

```
> config switchconfig key-zeroize ap ap-name
```

## Disallowed Security Functions

These cryptographic algorithms are not approved, and may not be used in FIPS mode of operations:

- RC4
- MD5 (MD5 is allowed for use in DTLS)
- HMAC MD5

## Self Tests

These self tests are performed by the module:

- Firmware integrity test (16 bit CRC is used for testing)
- AES KAT (Firmware and Hardware)
- AES-CCM KAT (Firmware and Hardware)
- AES-CMAC KAT (Firmware and Hardware)

- SHA-1 KAT (Firmware)
- HMAC SHA-1 KAT (Firmware)
- RNG KAT (Firmware)
- RSA KAT (Firmware)
- Continuous random number generator test for Approved and non-Approved RNGs

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, using the Cisco Bug Search Tool (BST), submitting a service request, and gathering additional information, see *What's New in Cisco Product Documentation* at: <http://www.cisco.com/c/en/us/td/docs/general/whatsnew/whatsnew.html>.

Subscribe to *What's New in Cisco Product Documentation*, which lists all new and revised Cisco technical documentation as an RSS feed and delivers content directly to your desktop using a reader application. The RSS feeds are a free service.

---

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2010-2015 Cisco Systems, Inc. All rights reserved.